

# Heat Pipe Tooling Installation Guide


1

Apply thermal paste to outside diameter of heat pipe



2

Slip fit into hole/slot

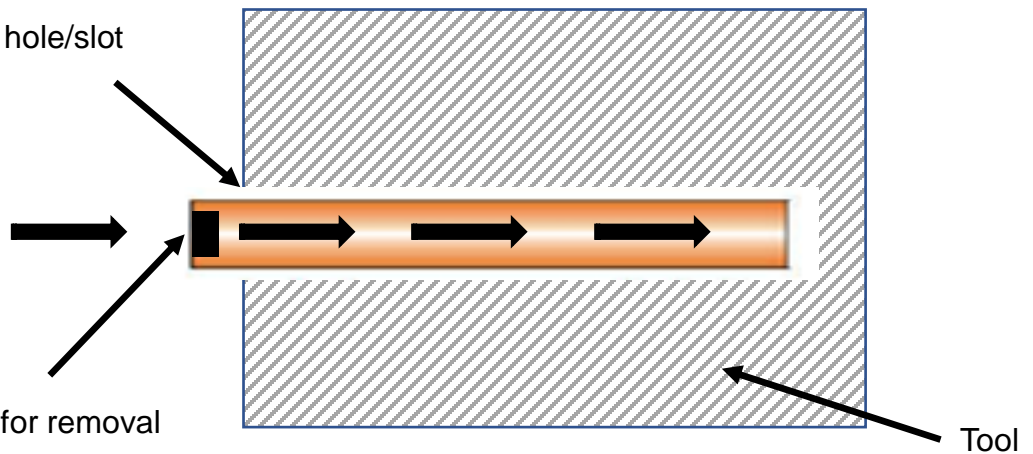

## Installation Guide

- Test: Dip one end of the heat pipe in boiling water, If you feel heat within 20-30 seconds the heat pipe is functioning.
- Apply a small amount of thermal paste on outside diameter of the heat pipe.
- The heat pipe should be slip fit, with minimal force, into the hole/slot.
- Remove heat pipe prior to processes above 500°F(260°C).
- Remove heat pipe prior to any tool cleaning processes.
- Heat pipe is soft and can bend easily, install with care.
- See [isThermal Heat Pipe Size & Drill](#) for more information.